

Bluetooth Indoor Thermometer & Hygrometer



According to the operating system of your smartphone, scan the following QR code to download and install.



iOS



Android


Introduction

Congratulations on your purchase of a Smart, Remote Bluetooth Thermometer & Hygrometer with Clock. Not only will you be able to remotely monitor the current temperature and humidity of your living room, bedroom, greenhouse, etc. from your smart phone, but also view the historical data of the past 24 hours, 1 week and 1 year. In addition, the smart phone's time will be synchronized to the device when connected to the phone via Bluetooth.

Components

- 1*Bluetooth Indoor Thermometer & Hygrometer
- 1*USB Charging Cable
- 1*User Manual

Features

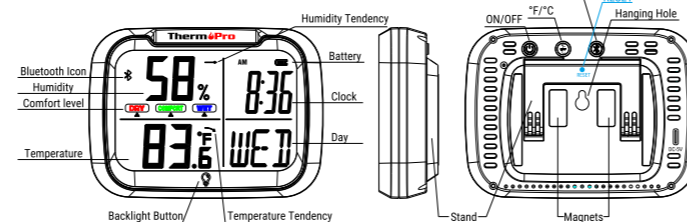

Buttons

1. **⏻ Button:** Press to turn on/off device.
2. **°F/°C Button:** Press to switch temp unit between °F and °C.
3. **Bluetooth Button:** Press and hold for 3 seconds to turn Bluetooth on or off.

Note: The Bluetooth icon will be shown on the display when the device is on by default.

4. **Light Button:** Press to turn on/off backlight. The backlight will automatically turn off after 10 seconds.

5. Bluetooth+⏻ Button:

Once powered on, press and hold the Bluetooth button. At the same time, press the ⏻ button 5 times. The LCD will flash 3 times and then the device will turn off. This function is to restore the device to the factory mode and clear the historical data. When the device is powered on again, the time will be 12:00 A.M. on Monday by default.

6. **RESET:** This button is behind the device stand. If the device is abnormal, press and hold the RESET button for more than 3 seconds to restart the device.

Specifications

Technology	Bluetooth 5.0
Remote Bluetooth Range	260ft/80m
Temperature Range	-22°F~140°F (-30°C~60°C)
Temperature Accuracy	±0.5°F(0.3°C)
Temperature Resolution	0.1°C/0.1°F
Humidity Range	10%~99%
Humidity Accuracy	±2%RH
Humidity Resolution	1%
Comfort Display	DRY, COMFORT, WET
Temperature Units	°F/°C
Backlight Color	Orange
Trend Arrows	↔
Mounting Options	Stand, Magnet, Hanging hole

Comfort Level

DRY	10%~30%
COMFORT	31%~60%
WET	61%~99%

Battery Indicator

Four grids	> 3.80V
Three grids	> 3.70V
Two grids	> 3.60V
One grid (Charging is recommended at this time)	> 3.50V
Blank	< 3.50V

Working Current

Sleep Mode	< 50uA
Working with Bluetooth	< 10mA
Working with Backlight	< 50mA

Usage

1. Download the ThermoPro Sensor APP

Download the ThermoPro Sensor APP from the APP Store (iOS devices) or Google Play (Android devices).

Note: This device supports smart phones or tablets that are running iOS 9.3 (or above) or Android 4.3 (or above).

2. Turn on the device

Press the ⏻ button to turn on the device. The device will begin to measure temperature and humidity and will display on the LCD display.

3. Connect to Bluetooth

(1) Enable Bluetooth on your phone and get close to the device. (Location Services

/GPS should be turned on for Android users).

(2) Make sure the Bluetooth icon displays on the LCD display which means that the device has entered pairing status. It is noted that the Bluetooth icon is shown on the LCD display by default. If there is no Bluetooth icon on the display, press and hold the **Bluetooth Button** to enable or disable the Bluetooth function of the device.


(3) Open the ThermoPro Sensor app on your phone, then tap the "+" icon at the bottom center of screen and select "TP-393XXX".

The pairing should be successful! Start using this smart Hygrometer & Thermometer to monitor your home environment!

Note: The time shown on the device will be synchronized to your phone when Bluetooth is connected.

Using the ThermoPro Sensor APP

☰: The main menu is in the upper left corner. You can find FAQs, contact us and how to switch temp units here.

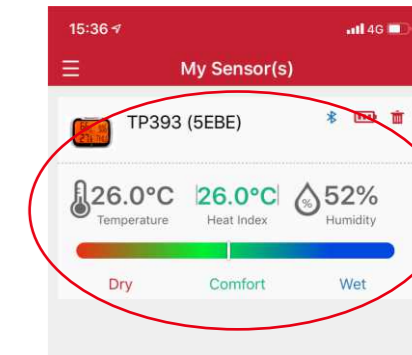


Press the circled area as above picture to view more detailed information.




When viewing the sensor information, temperature and humidity data recorded in the past 24 hrs/1 week/1 year will be displayed here.

: To adjust sensor settings, press the edit button in the upper right corner. You can rename your sensor and temperature/humidity alerts can be set here.

(1) Press Sensor Name to rename your sensor's name.

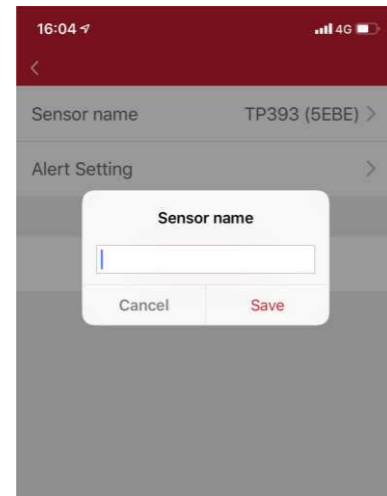

(2) Press Alarm Settings to enable/disable temperature or humidity alarms. Further, set your desired MAX/MIN temperature or humidity range.

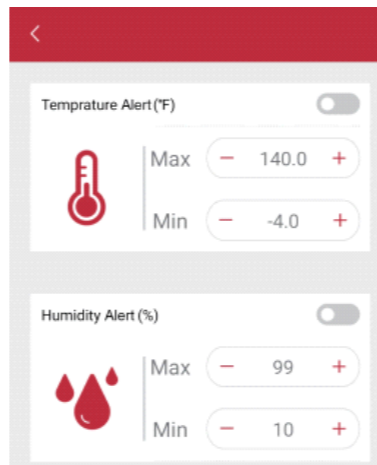


Declaration of Conformity

Hereby, the manufacturer declares that this product complies with the basic requirements and applicable regulations of the Radio Equipment Directive 2014/53/EU, the EMC Directive 2014/30/EU. The complete declaration of conformity can be found at:

<https://itronicsmall.com/eu-declaration-of-conformity/>

Disposal

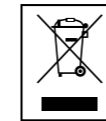

Meaning of the "Dustbin" Symbol

- Protect our environment: do not dispose of electrical equipment in the domestic waste.
- Please return any electrical equipment that you will no longer use to the collection points provided for their disposal.
- This helps avoid the potential effects of incorrect disposal on the environment and human health.
- This will contribute to the recycling and other forms of reutilisation of electrical and electronic equipment.
- Information concerning where the equipment can be disposed of can be obtained from your local authority.

CAUTION: Batteries/rechargeable batteries must not be disposed of with household waste!

- The batteries must be removed from the appliance.
- Take spent batteries to the appropriate collection point or to a dealer.
- Your town or local authority can provide information about public collection points.

This symbol can be found on batteries/rechargeable batteries which contain hazardous substances.



- Pb = contains lead
- Cd = contains cadmium
- Hg = contains mercury
- Li = contains lithium

Limited One-year Warranty

ThermoPro warrants this product to be free of defects in parts, materials and workmanship for a period of one year, from date of purchase. Should any repairs or servicing under this warranty be required, contact Customer Service by phone or email for instructions on how to pack and ship the product to ThermoPro. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Customer Service

Call or Text: 1-877-515-7797(USA & Canada only)
44-80-164-1683(UK)

Email: service@buythermopro.com

Hours: Weekdays 8:00 AM- 8:00 PM EST
1:00 PM - 12:00 PM CET(UK)